


RACEFACE

BOTTOM BRACKET INSTALLATION


BB92/89.5/104.5/107

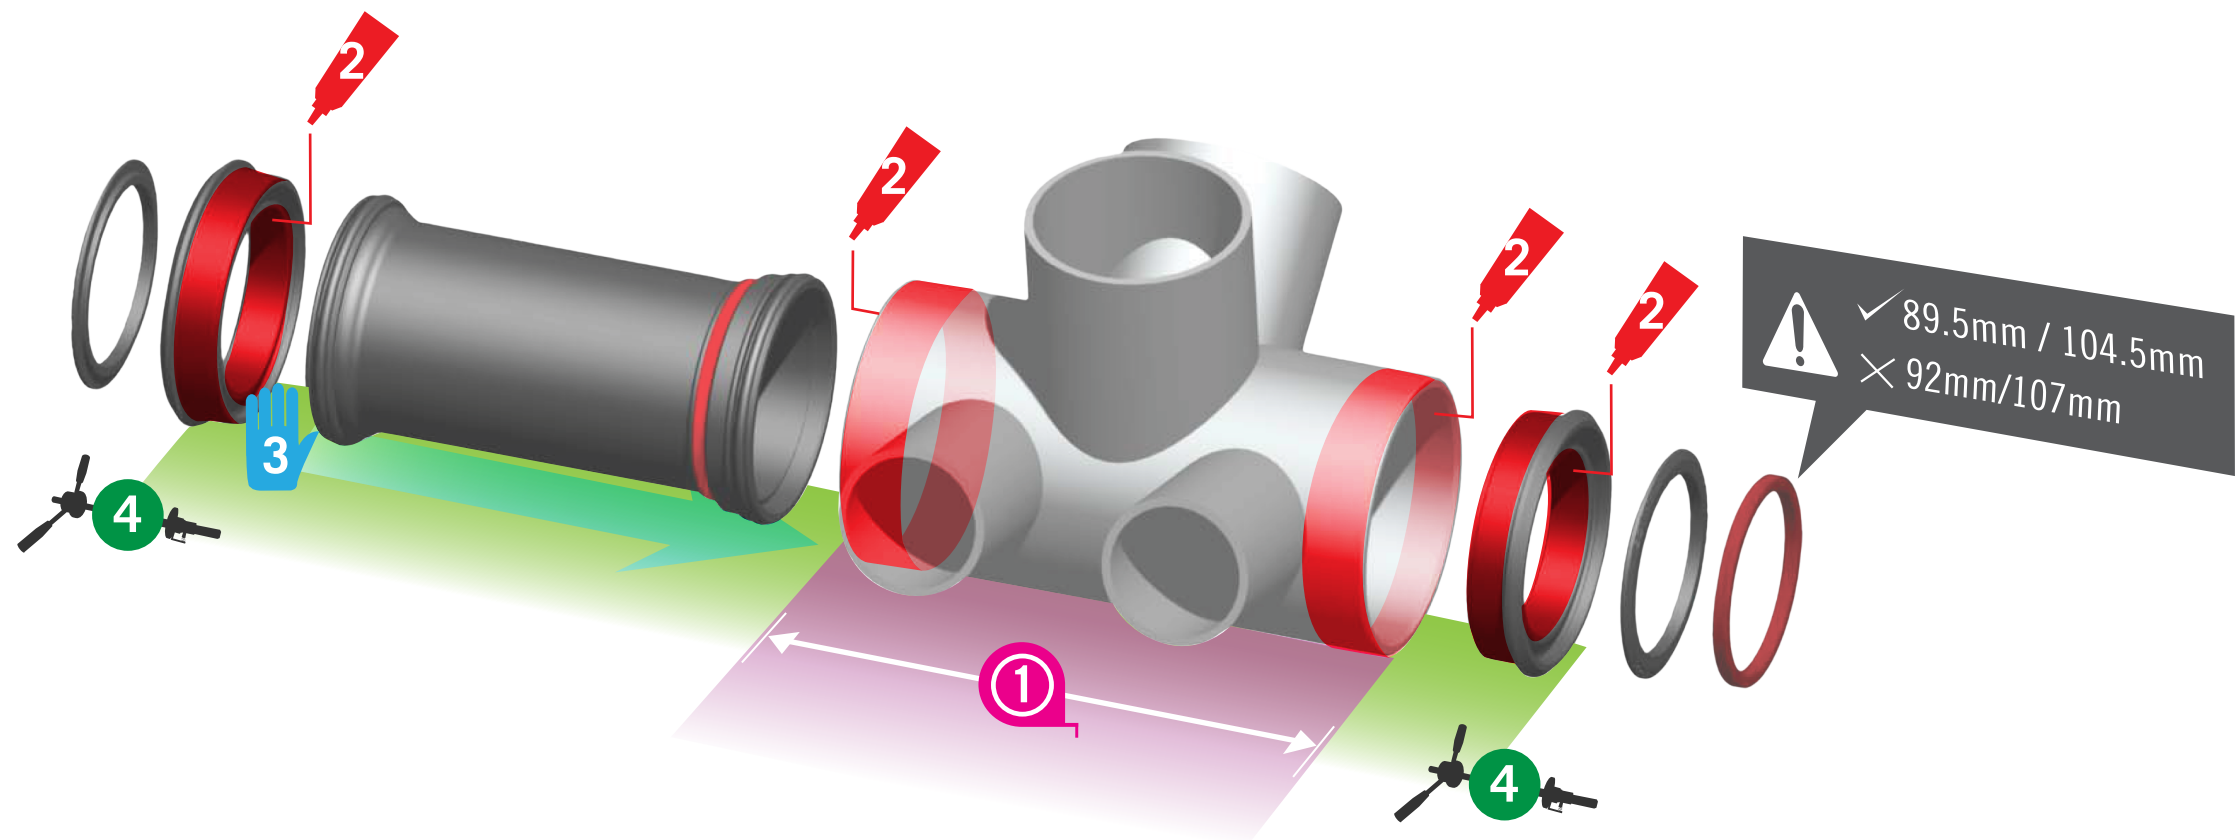

1

MEASURE
Messen
Medir
Mesurer

✗ 89.5mm / 104.5mm
✓ 92mm / 107mm

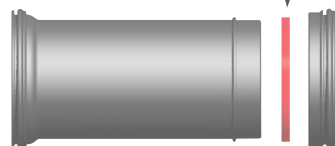

2

GREASE
Fett
Engrasar
Graisser

3

HAND PRESS
Von Hand Einpressen
Apretar Con La Mano
Enfoncer à la main



Park Tool™ HHP-2